



Power Port 8PTC– V2 Quick Install Note

This note is a quick guide only. Please refer to full installation notes available from jackfuse.com before first installing these modules.

NOTE: If installed correctly you will NOT need a separate fire interface relay.

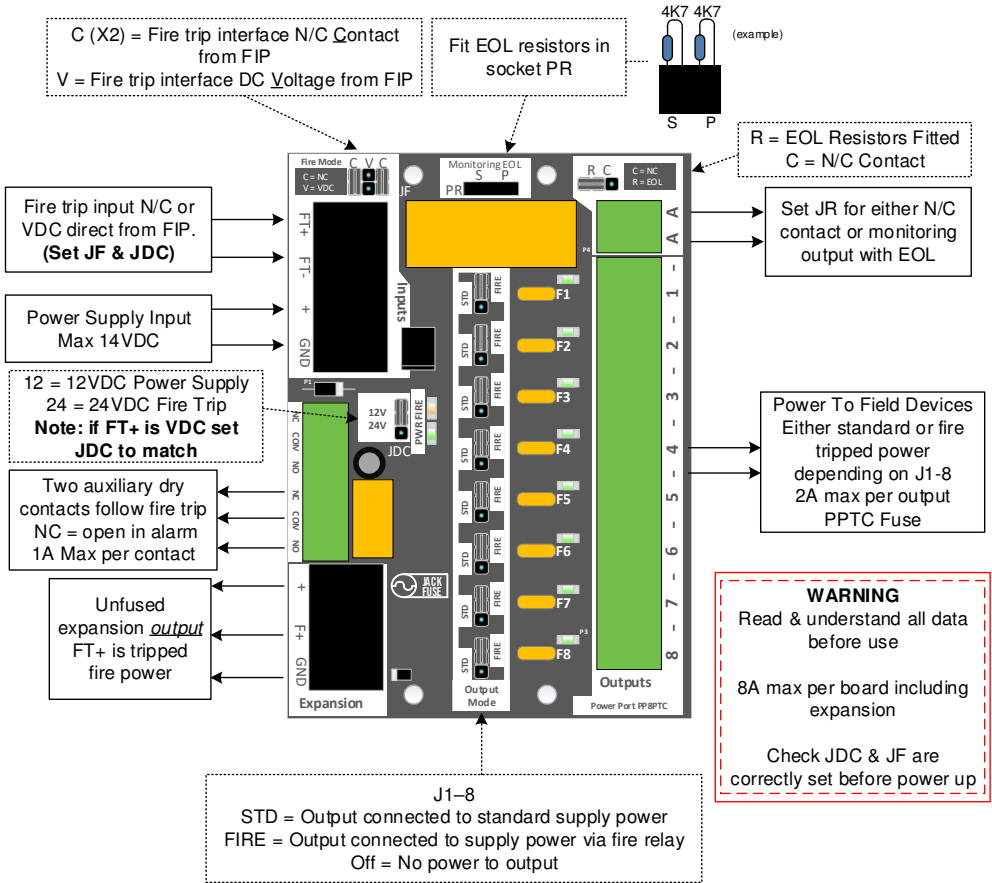

Fire Trip Interface

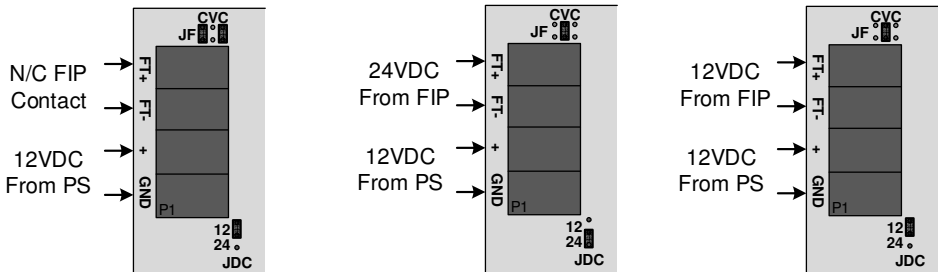

Technical Data

Input voltage range	0-14V DC
Fire relay coil voltage	12-28V DC
Max current per board total	8A
Max standard power current	8A
Max fire power current	8A
Max current per output	2A
Max alarm contact current	2A
Max AUX relay contact current	1A each
Fused outputs	8
Fuse type	PPTC 2A Hold. Self-healing
Mounting	DIN rail
Dimensions	110 L X 75 W X 50 H (mm)

LED Indicators

LED Designator	Description
D1-8	Fuse status, on indicates fuse intact and power is available.
FIRE	Fire relay status, on indicates relay is active and fire power is available.
PWR	Power is available from the power supply.

For complete install notes, data sheets and more products please visit

www.jackfuse.com

